



Panasonic DECT 6.0 Button Replacement

You will be able to fix broken or jammed buttons on your Panasonic DECT 6.0 with this guide.

Written By: Jacob



INTRODUCTION


In this guide we will show you how to open your Panasonic home phone, and replace/un-jam any buttons on your phone.



TOOLS:

- [JIS Driver Set](#) (1)
-

Step 1 — Jammed/Broken Buttons

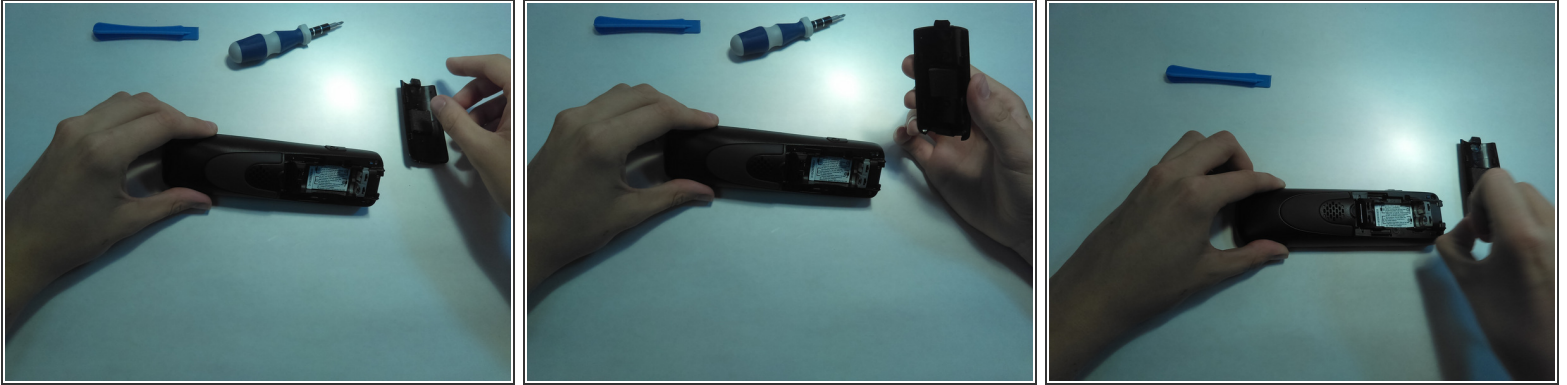

- Remove the outside covering.
- Remove batteries/energy source and place it somewhere safe.
- Unscrew any screws you see on the inside of the casing. (make sure to remember what screws go where).

Step 2




- Start to carefully detach the back of the phone case off.
- Go up and down each sides slowly prying it off.
- Make sure not to damage anything inside during this step.

Step 3




- Unscrew the inside screws, and make sure not to damage the circuitry.
- Place the screws somewhere safe and remember where they go.

Step 4

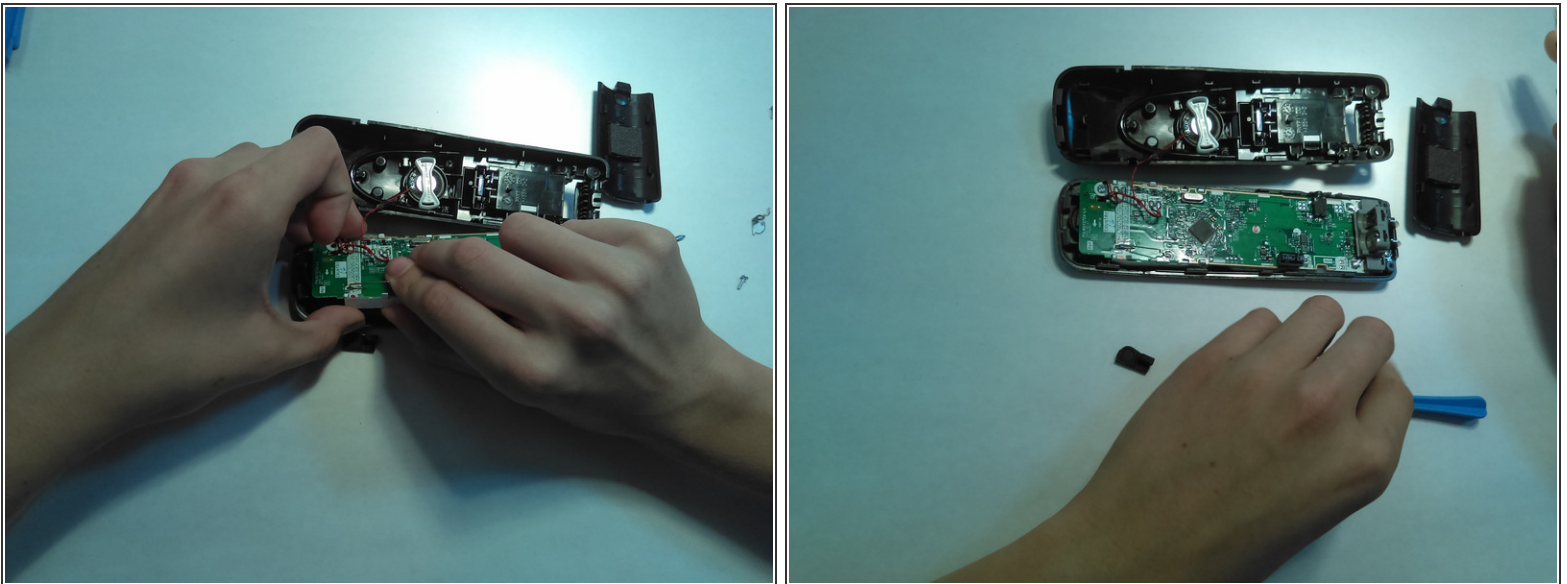

- Look at all of the parts and try to identify what you are working with.
- Remove any loose parts you are not going to be fixing.

Step 5

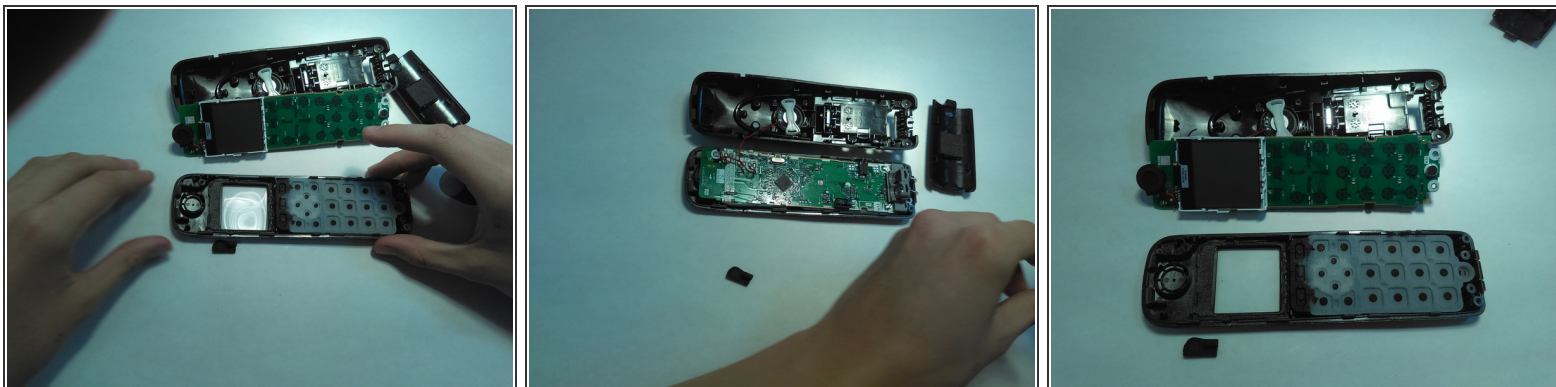

- Carefully remove the circuitry and cords without disconnecting anything.
- Get all parts that you are not fixing out of the way, and get to the buttons in the front.

Step 6



- Identify the broken/jammed button.
- Replace the button and make sure to put the button back how you found it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 02:30:14 PM.